

Rozložení tlačítek dálkového ovládače Alien Longer CLR79834-E4

POW	
AV	
SHIFT	
TEXT	
TV	
TIMER	
SUBT.	
EXPAND	
BACK	
UPDATE	
REVREAL	
TXT STOP	
INFO	
RED	
GREEN	
YELLOW	
BLUE	
AUDIO	
UP	
PICT	
LEFT	
OK	
RIGHT	
MENU	
DOWN	
EXIT	
VOL+	
I+	
CH+	
VOL-	
MUTE	
CH-	
1	
2	
3	
4	
5	
6	
7	
8	
9	
-/--	
0/10	
P/C	

